 
# Setup Guide — SW HDMI Series

This guide provides basic instructions for setting up the Extron SW HDMI Series switchers.





#### Installation

## Step 1 — Mount the unit (optional)

Turn off or disconnect all equipment power sources and mount the switcher as desired.

## Step 2 — Connect inputs

Connect source devices to one or more HDMI input connectors. Only single link HDMI signals are supported.




#### Step 3 — Connect an output

Connect a display device to the HDMI output connector.

## Step 4 — Connect RS-232 (optional)

Connect three wires from pins 2, 3, and 5 of the RS-232 cable's female 9-pin HD connector to pins 1, 2, and 3 of one of the provided 5-pin captive screw plugs. Insert the plug into the Remote/Auto-SW shared connector, and connect the cable to the computer's serial port. (See the illustration below.)

#### Remote/Auto-SW

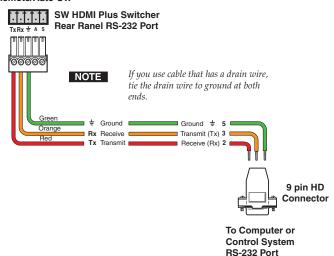


For explanations of all SIS commands, refer to chapter 4 of the SW HDMI Series User's Manual.

# Setup Guide — SW HDMI Series, cont'd

## Step 5 — Enable auto switching (optional)


Use a jumper wire to connect pins 4 and 5 of one of the provided 5-pin captive screw plugs. Insert the plug into the Remote/Auto-SW shared connector. See the illustrations below and at right.



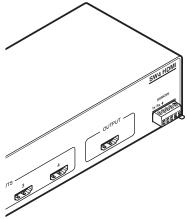

## Step 6 — Wire power connector

 If using an Extron external power supply that is not already wired, attach the provided 2-pin captive screw connector to the power supply as shown at right.



## Step 7 — Power on


- a. Power on the output device.
- **b.** Apply power to the SW HDMI switcher.
- c. Power on the input devices.

# **Application diagram**

The figure at right shows an example of how an SW4 HDMI switcher can be connected.

# NOTE

HDCP compliant sources require the use of HDCP compliant displays. Refer to the user's manual for your source or display device for information on its HDCP compliance.

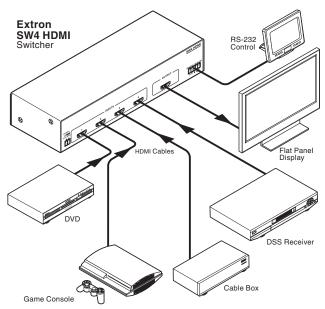

Extron USA - West Headquarters	Extron USA
+800.633.9876	+800.633.9876 Inside USA / Canada
Inside USA / Canada Only +1.714.491.1500	+1.919.863.1794

±1 714 491 1517 F∆X

- East +1.919.863.1797 FAX

Extron Europe +800.3987.6673 +31.33.453.4040 +31.33.453.4050 FAX Extron Asia +800.7339.8766

Extron Japan +81.3.3511.7655 +81.3.3511.7656 FAX Extron China +400.883.1568 Inside China Only +86.21.3760.1568 +86.21.3760.1566 FAX

Extron Middle East +971.4.2991800 +971.4.2991880 FAX

68-1317-50 Rev. A 08 09

© 2009 Extron Electronics. All rights reserved.