

FEELWORLD®

TP13A TELEPROMPTER User Manual



SET UP INSTRUCTION FOR CAMERA SHOOTING

- 1 Lock the teleprompter body on the main plate by screw




- 2 To install the camera on the lifting mount, then cover the lens by the sunhood



- 3 By adjustin the screw to fix the highth of the teleprompter body



- 4 Adjust the lifting mount highth by locking bolt

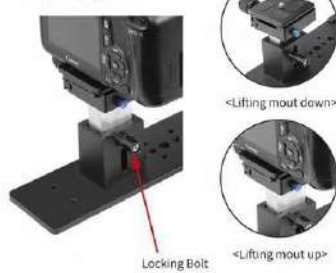


SET UP INSTRUCTION FOR CELLPHONE SHOOTING

- 1 Lock the teleprompter body on the main plate by screw
- 2 Remove the sunhood, and put on the panel and foram ring
- 3 Use the magnetic clamp to hold the cellphone, and affix on the panel



- 4 Install the prompting devices (cellphone or tablet under 11")

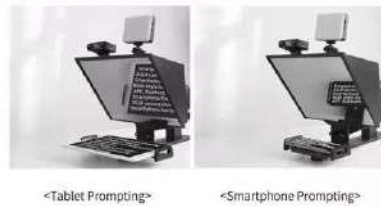

APP Suit for IOS/Android

FOR IOS

To Search Feelworld in Appstore

FOR ANDROID

pls search "Feelworld" on Google Play store, then dowload to install

EXCLUSIVE

REMOTE BUTTON INSTRUCTION



BLUETOOTH CONNECTION

1. SWITCH ON:
Press (about 3s) then indicate light on. (Battery install required)
2. CONNECTION:
Light flashes, connected with phone (device name: Feelworld)
3. REMOTE CONTROL:
Running the app, you can remote control
4. SWITCH OFF:
Press (about 3s) until the light off.

Remark: if power on without connect any device, it will power off after 5 minutes, if connected the phone but no operation, it will power off after 30 minutes.